## DART SERVICE INSTRUCTION

TO AMEND INSTALLATION INSTRUCTIONS D206-559 REV. K OR EARLIER AND INSTRUCTIONS FOR CONTINUED AIRWORTHINESS ICA-D206-559 REV. 2 OR EARLIER REF. TCCA STC: SH92-17

REF. FAA STC: SH1031NE


## **PURPOSE:**

For D206-559-011/-013/-021/-023/-031/-033 bearpaw kits, the AN4 bolts specified were for installation with the aft skidtube wearshoe removed. Bolt lengths are increased to accommodate installation with the skidtube wearshoe installed, which is more practical.

## <u>CHANGE:</u>

The parts list is updated as shown on sheet 2 of this service instruction, for bearpaw kits: D206-559-011 at CHG 007, D206-669-013 at CHG 006, D206-559-021 at CHG 008, D206-559-023 at CHG 007, D206-559-031 at CHG 002, and D206-559-033 at CHG 002.

Figure 4 of D206-559 and Figure 32-3 of ICA-D206-559 are amended as follows:

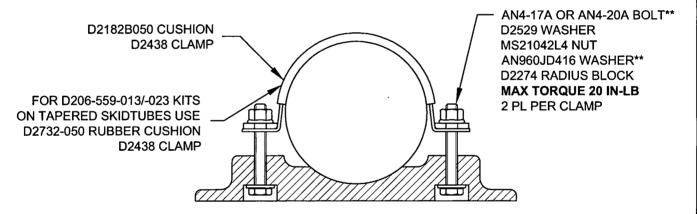

\*\*USE AN4-17A BOLTS WITH AN AN960JD416 (OR NAS1149D0463J) WASHER IF INSTALLING BEARPAW ON 3.0" DIA. TUBE OR SMALLER. USE AN4-20A BOLTS WITH TWO AN960JD416 WASHERS IF INSTALLING BEARPAW ON TUBE LARGER THAN 3.0" DIAMETER (DART TUBE). ADDITIONAL AN960JD416 WASHERS MAY BE ADDED UNDER NUT TO ENSURE 2-4 THREADS IN SAFETY. IT IS ALSO ACCEPTABLE TO USE LONGER/SHORTER AN4 BOLTS IF REQUIRED TO ENSURE BEARPAW IS HELD SECURELY.

FIGURE 4: TYPICAL CLAMPING DETAIL (D206-559)
FIGURE 32-3: TYPICAL CLAMPING DETAIL (ICA-D206-559)

CANADA DEPARTMENT OF TRANSPORT AIRCRAFT CERTIFICATION BRANCH DAO # 01-O-01					
BY: D. SHEPHERD (DE # 02)					
DATE: 10.06.30 CERT. NO.: SH92-17 ISSUE NO.: 7					

Α	NEW IS	SSUE	CP	10.06.30		
REV.		C	ESCRIPTION	BY	DATE	
DESIGN		P	DART AEROSPACE LTD			
DRAWN		P	HAWKESBURY, ONTAR	IO, CAN	ADA	
CHECKED		<u></u>	DRAWING NO.		REV. A	
MFG. APPR.		, N/A	DSI 9527	5	SHEET 1 OF 2	
APPROVED		1111	TITLE		SCALE	
DE APPR.			BOLT CHANGE	NTS		
DATE	10.0	6.30	COPYRIGHT © 2010 BY DART A THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNIC WRITTER PERMISSION FROM DART AE	O ON THE EXPRE	SS CONDITION THAT IT IS	

## 5.0 PARTS LIST (D206-559 REV. K) 32.7 PARTS LIST (ICA-D205-559 REV. 2)

Qty -011	Qty -013	Qty -021	Qty -023	Qty -031	Qty -033	Qty -113	Part Number	Description	
Х							D206-559-011	Bearpaw Kit 206 A/B	
	Х						D206-559-013	Bearpaw Kit 206 L/L1/L3/L4/407	
		Х					D206-559-021	Narrow Bearpaw Kit 206 A/B	
			Х				D206-559-023	Narrow Bearpaw Kit 206 L/L1/L3/L4/407	
				X			D206-559-031	Wearplate Kit	
					Х		D206-559-033	Wearplate Kit	
						Х	D407-559-113	Large Bearpaw Kit 206 L/L1/L3/L4/407	
4	6	4	6				D2182B050	RUBBER CUSHION	
8	12	8	12			20	D2274	RADIUS BLOCK	
2							D2435	19" X 16" BEARPAW	
	2						D2432F	19" X 24" BEARPAW	
		2	-				D2671	13" X 16" BEARPAW	
			2				D2672F	13" X 24" BEARPAW	
4	6	4	6				D2438	CLAMP	
8	12	8	12				D2529	WASHER	
	6		6				D2732-050	RUBBER CUSHION	
						2	D3456-1	WASHER	
					2		D3859-041	WEARPLATE	
				2			D3860-041	WEARPLATE	
						2	D4010-041	BEARPAW ASSEMBLY	
						8	D4011-1	CLAMP, SHORT	
						2	D4011-3	CLAMP, LONG	
						8	D4011-5	CLAMP, SHORT (OEM)	
						10	D4012-1	CUSHION	
						2	AN4C10A	BOLT	
8	12	8	12	8	12		AN4-17A	BOLT	
8	12	8	12	8	12		AN4-20A	BOLT (WAS AN4-15A)	
-						4	AN4C13A	BOLT	
						8	AN4C15A	BOLT	
			The state of the s			8	AN4C17A	BOLT	
16	24	16	24				AN960JD416	WASHER (OR NAS1149D0463J)	
8	12	8	12	8	12		MS21042L4	NUT (OR MS21042-4)	
						20	MS21043-4		
				8	12		NAS1149D0463J	WASHER (OR AN960JD416)	
2		2					QS200M44S	CLAMP	

CANADA
DEPARTMENT OF TRANSPORT
AIRCRAFT CERTIFICATION
BRANCH
DAO # 01-O-01

BY: D. SHEPHERD (DE # 02)

DATE: 10.06.30
CERT. NO.: SH92-17
ISSUE NO.: 7

DESIGN DRAWN	92	DART AEROS HAWKESBURY, ON		
CHECKED		DRAWING NO.	REV. A	
MFG. APPR.	N/A	DSI 9527	SHEET 2 OF 2	
APPROVED	M.	TITLE	SCALE	
DE APPR.	#	BOLT CHANGE	NTS	
DATE 10.0	6.30	COPYRIGHT © 2010 BY DART AEROSPACE LTD  THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS  NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT  WRITTEN PERMISSION FROM DART AEROSPACE LTD.		